
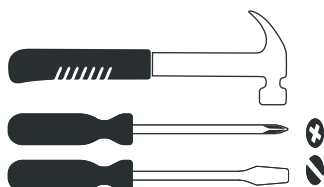


T42 / T44

F28042025

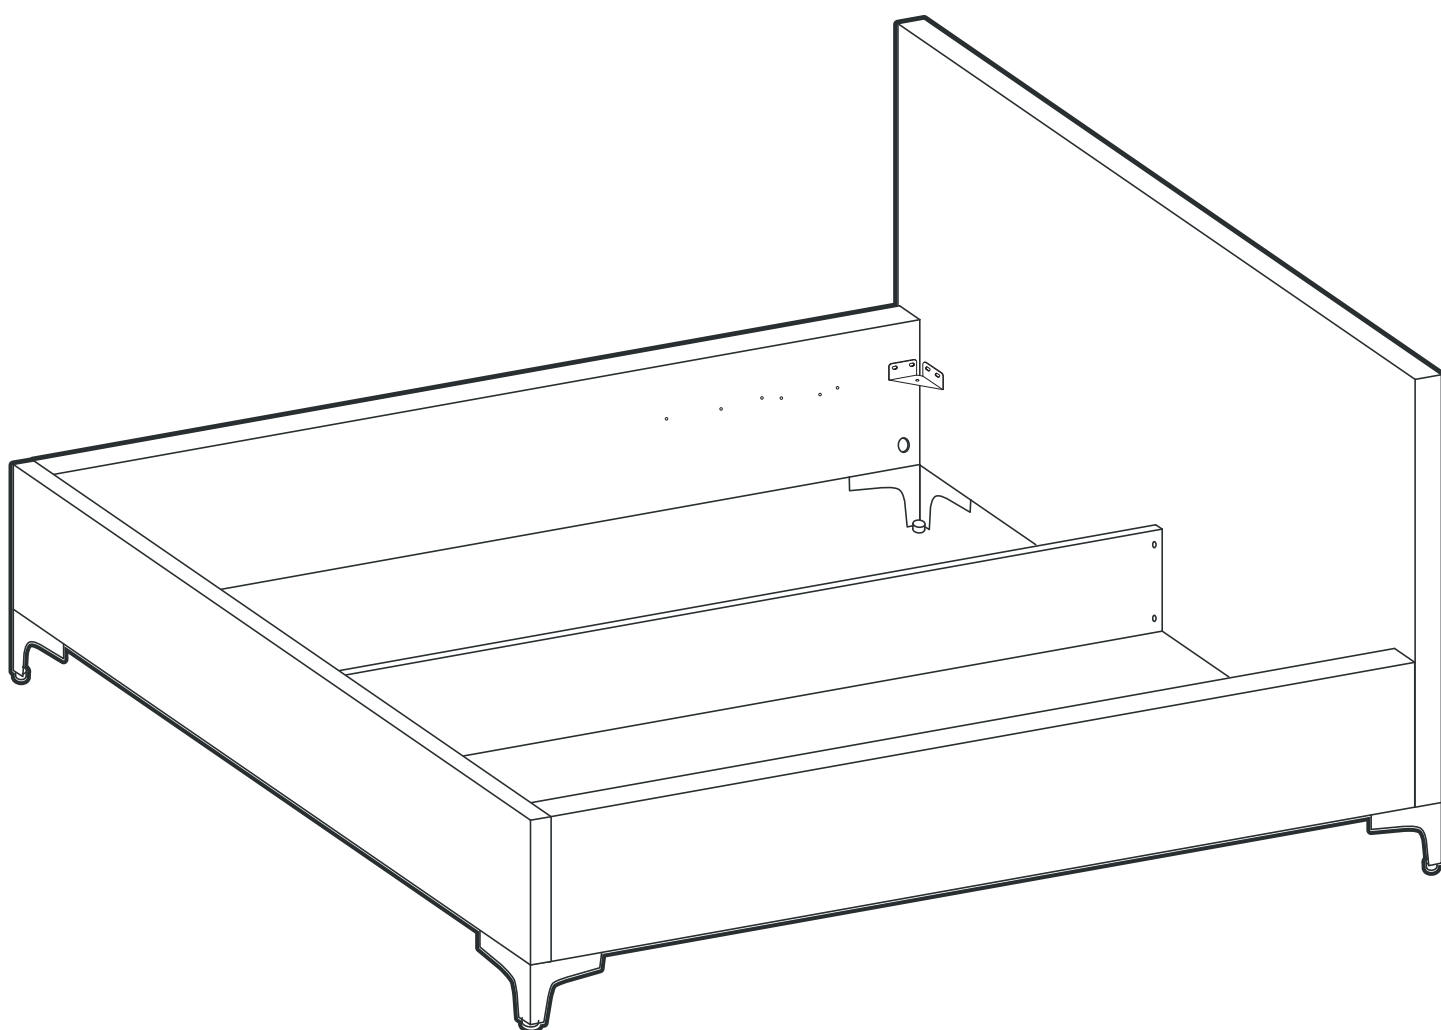





FDM SP. Z O. O. SP.K.
ZWYCIĘSTWA 52A
44-100 GLIWICE
E-MAIL: SKLEP@FDM.PL

MADE IN POLAND


T42 / T44

F28042025


 : 1/X

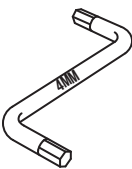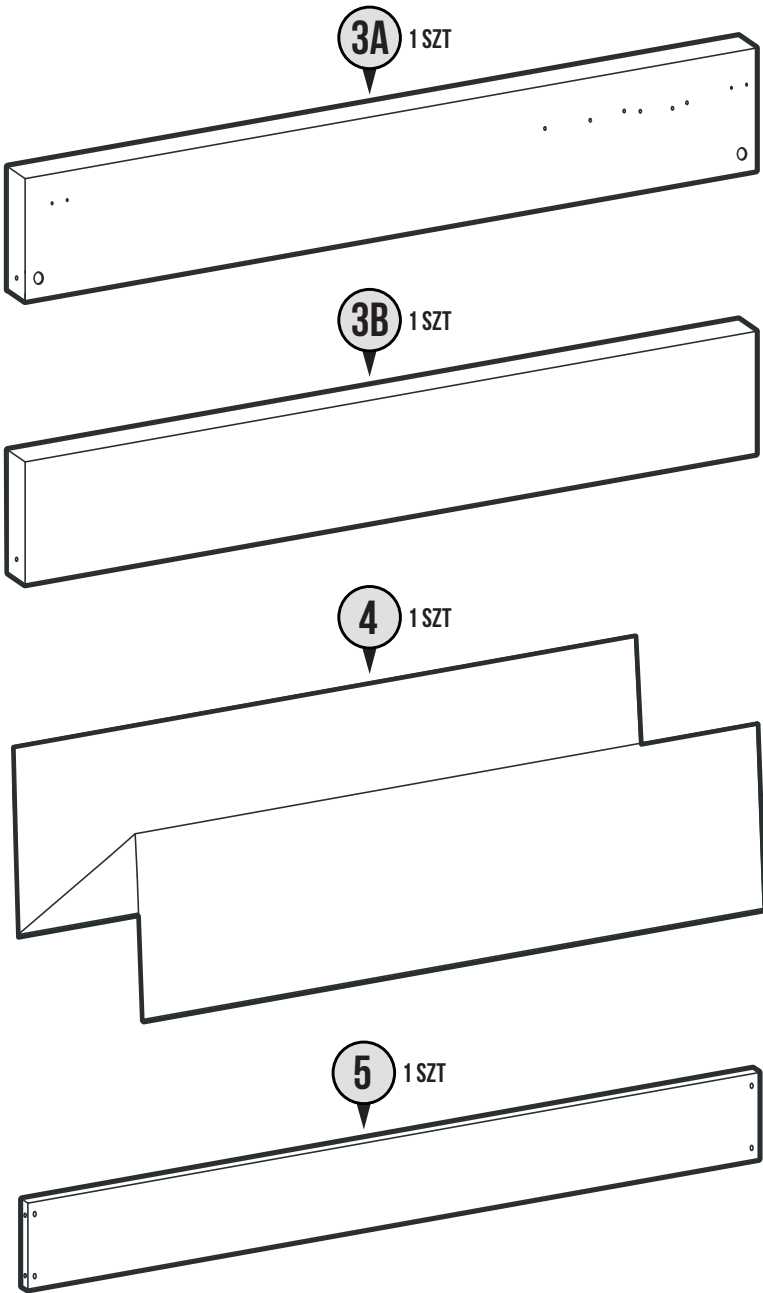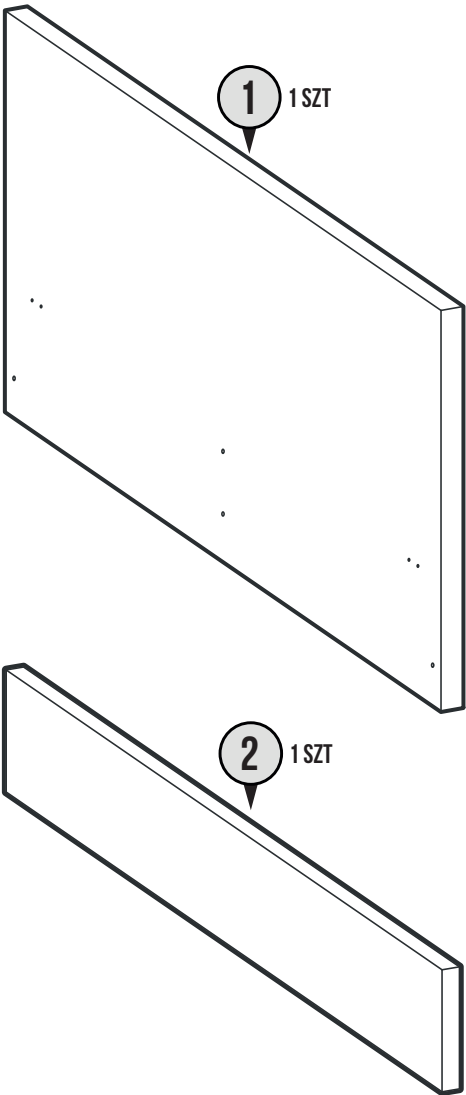

B1-1_{SZT}

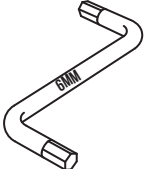

B2-1_{SZT}

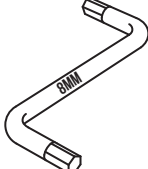

B3-1_{SZT}




G-16_{SZT}




H-8_{SZT}




J2-4_{SZT}



K1-24_{SZT}

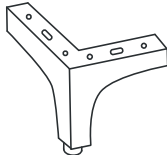

N-4_{SZT}




T-130_{SZT}



U1-4_{SZT}



U2-4_{SZT}



X4-4_{SZT}




Y1-4_{SZT}







Y2-4_{SZT}

1

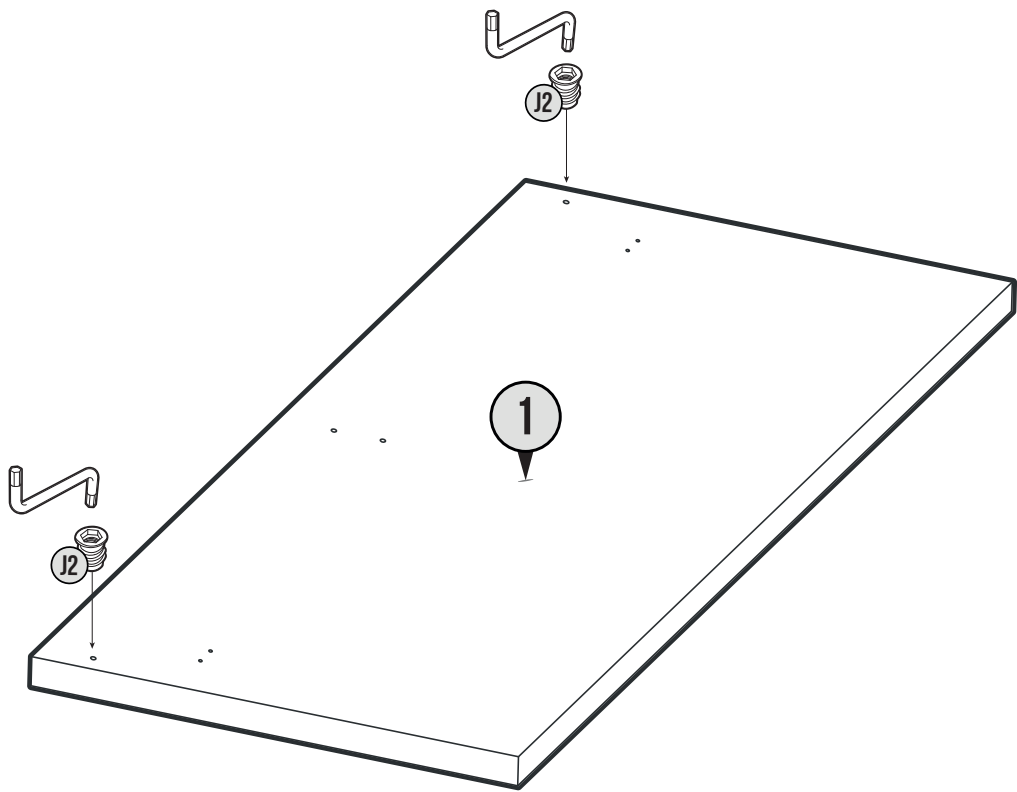

J2-2 SZT

2

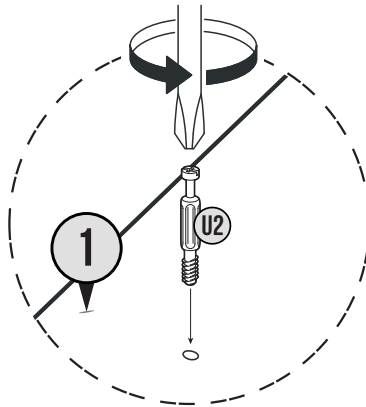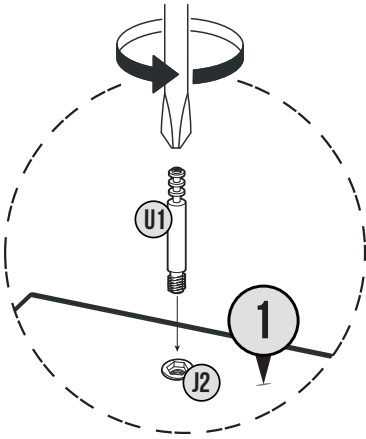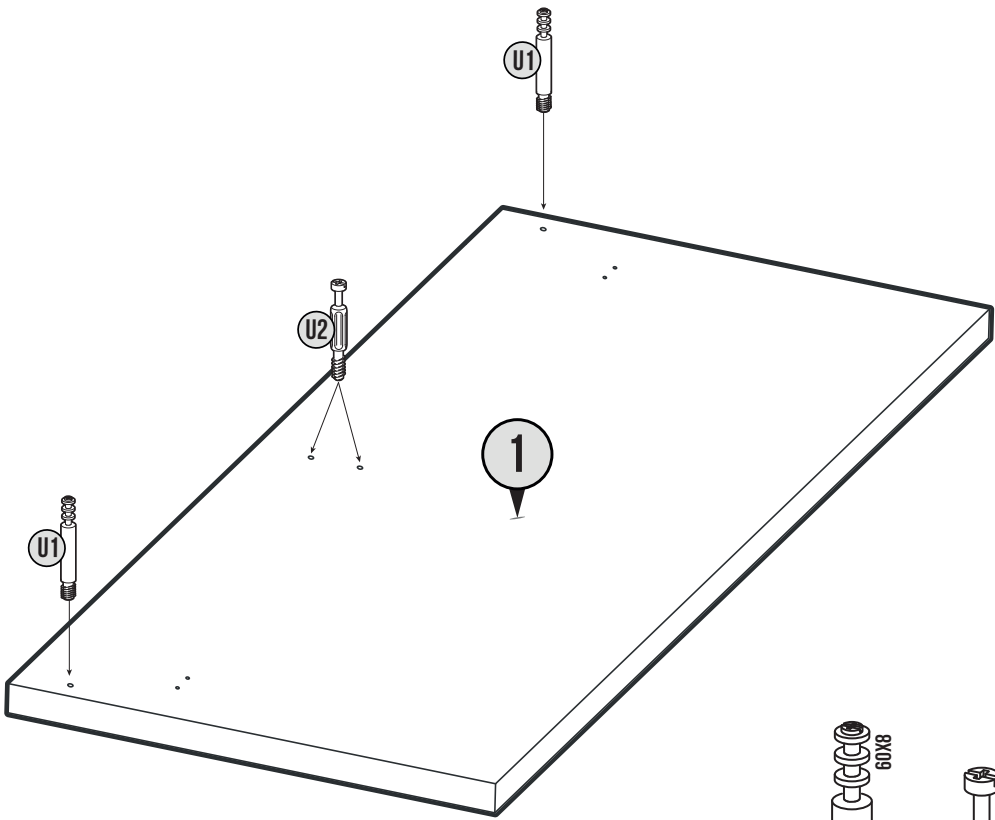


U1-2 SZT





U2-2 SZT

3

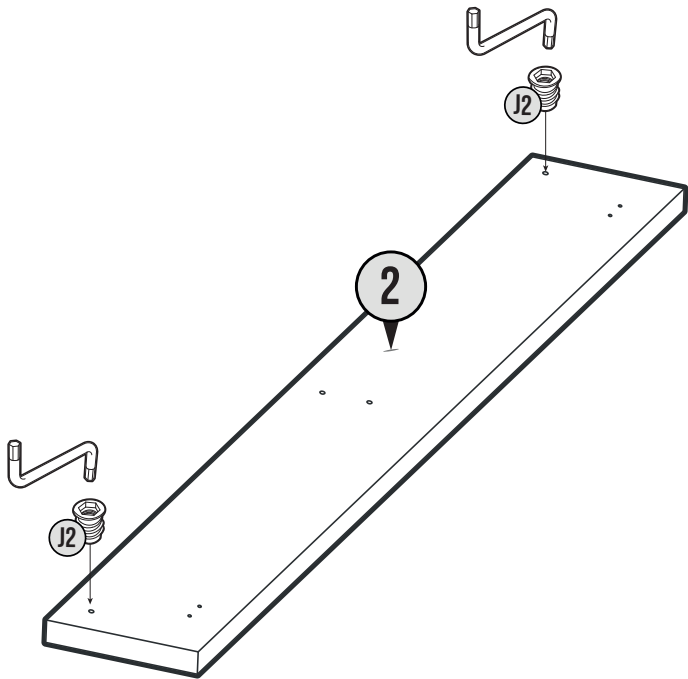

J2-2_{SZT}

4

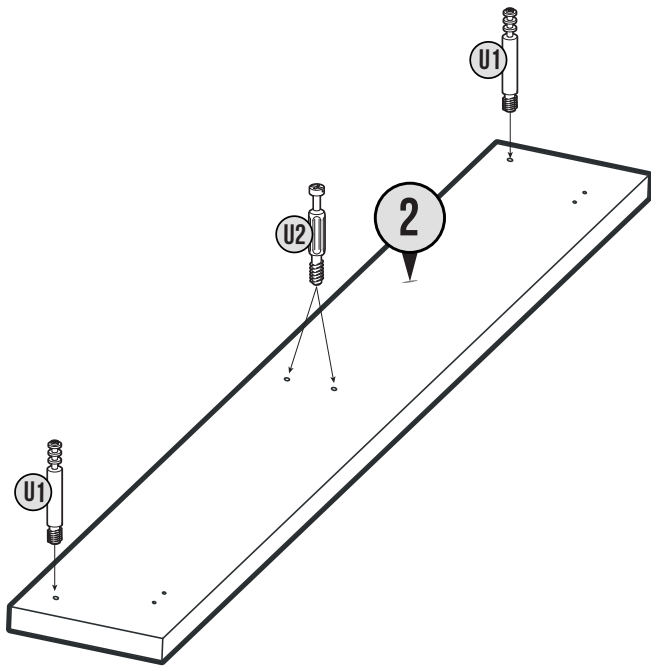


U1-2_{SZT}



U2-2_{SZT}



5

2X

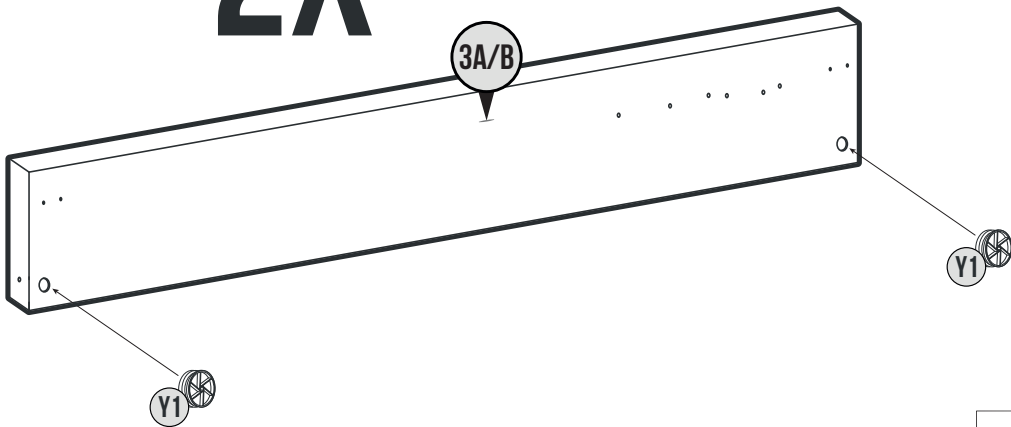




Y1-4_{SZT}

6

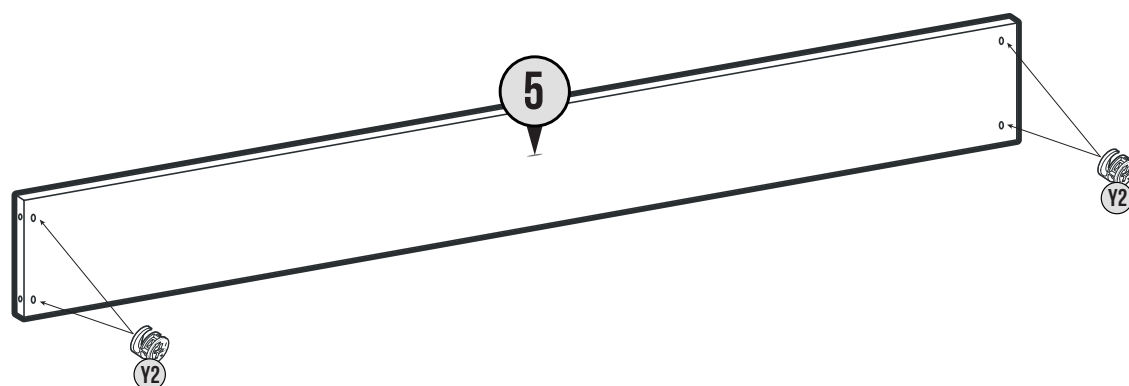




Y2-4_{SZT}

7

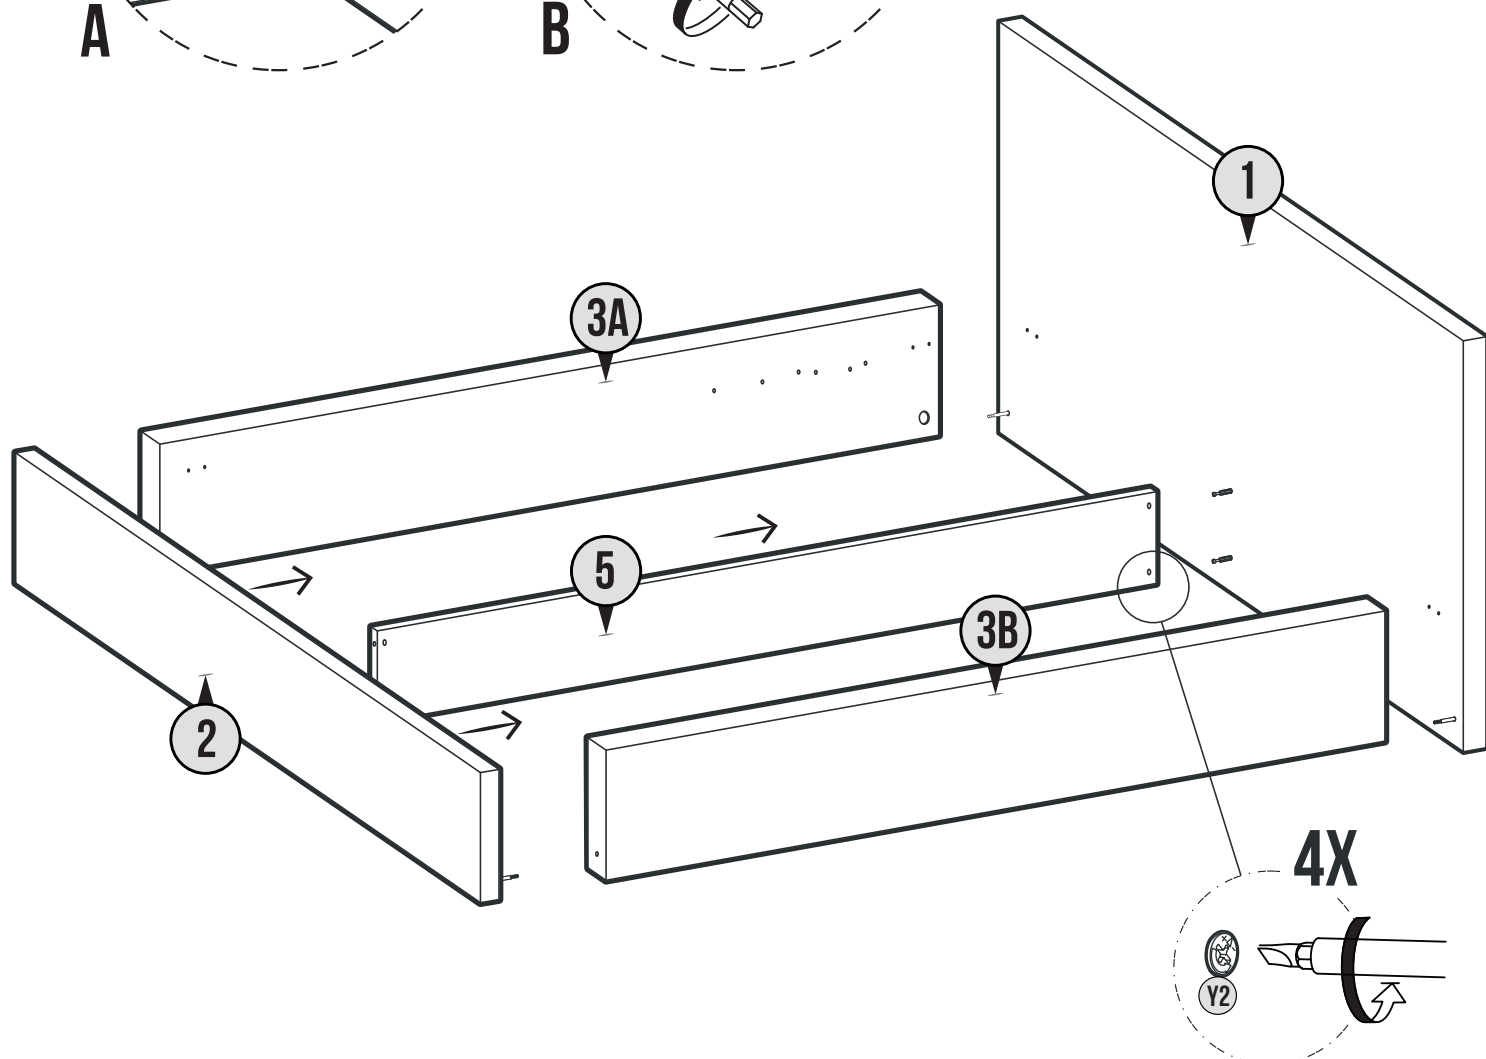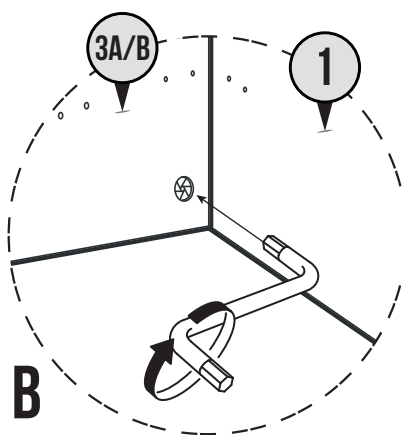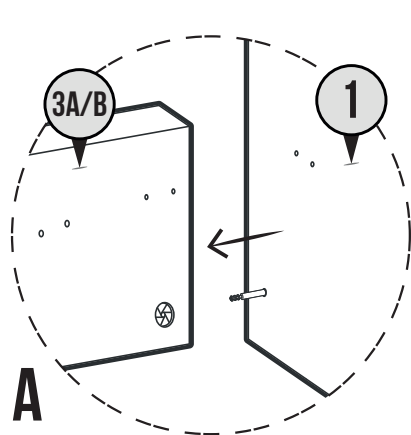


8

4X

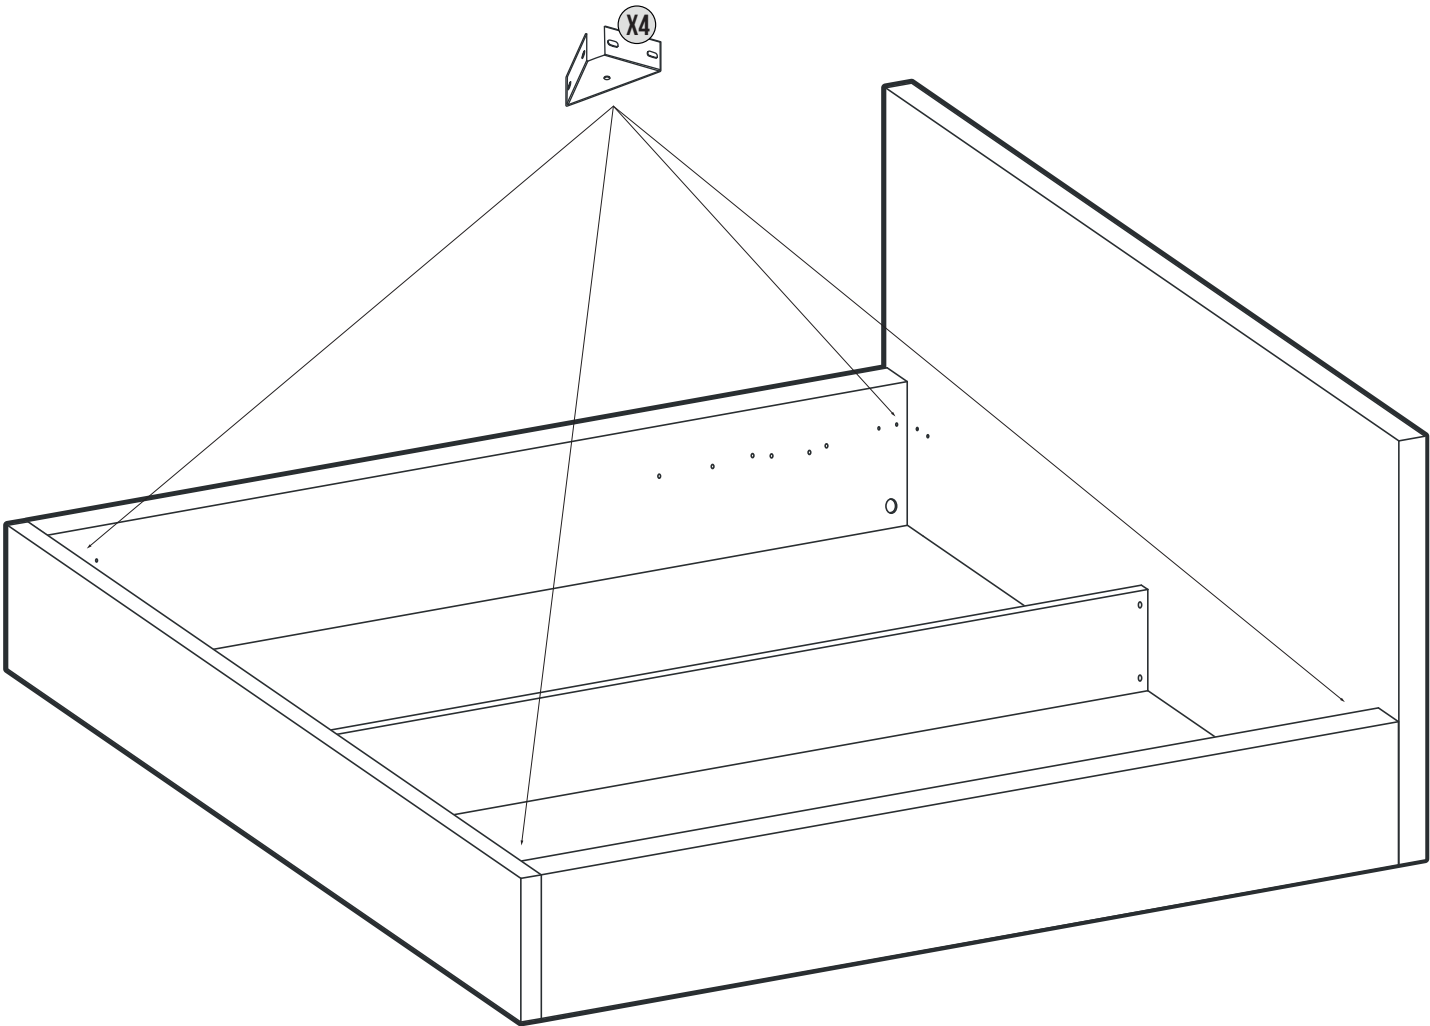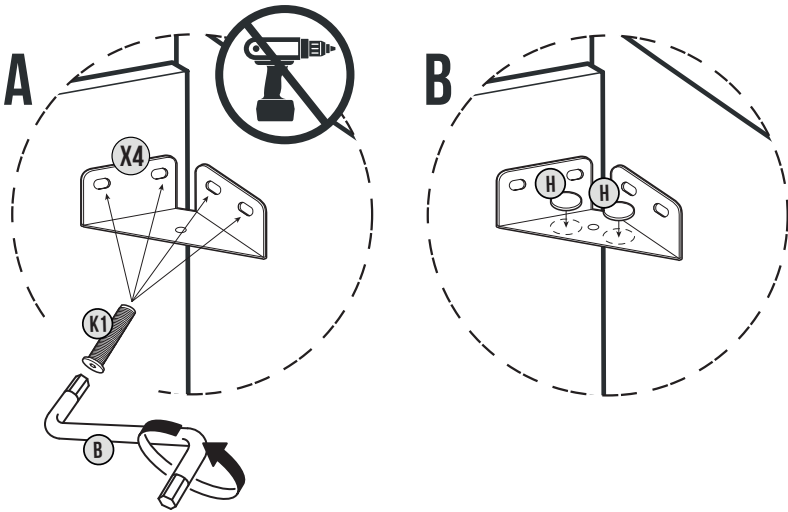

K1- 16_{SZT}







X4-4_{SZT}





H-8_{SZT}

9

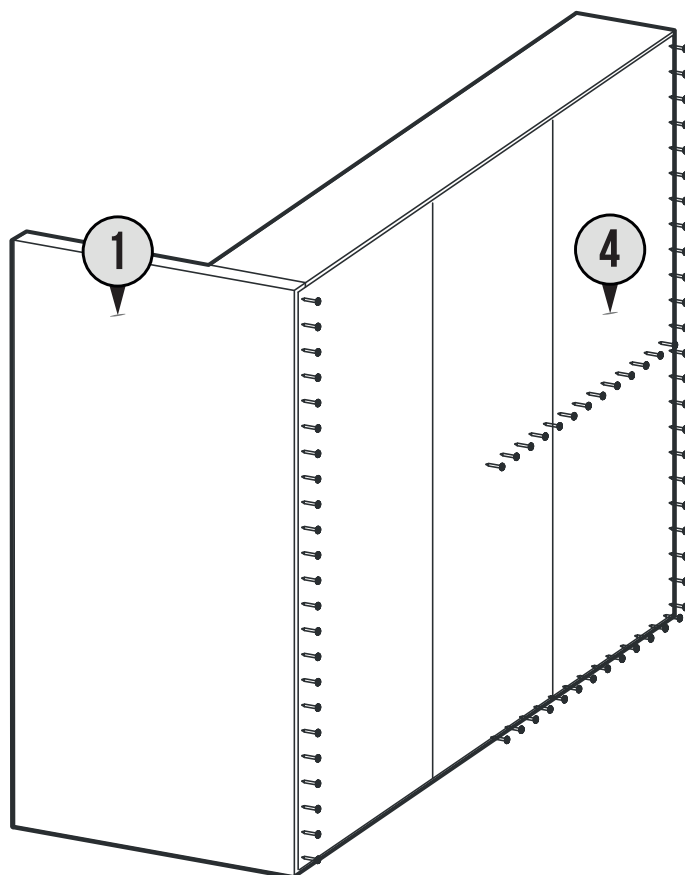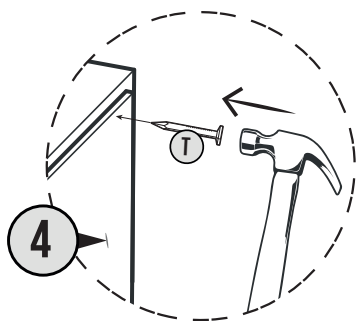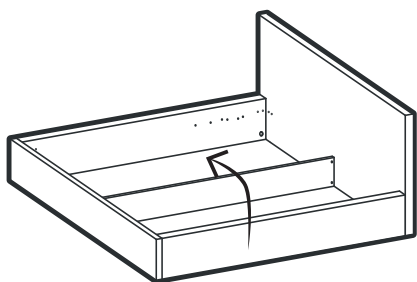


T- 130_{SZT}



10

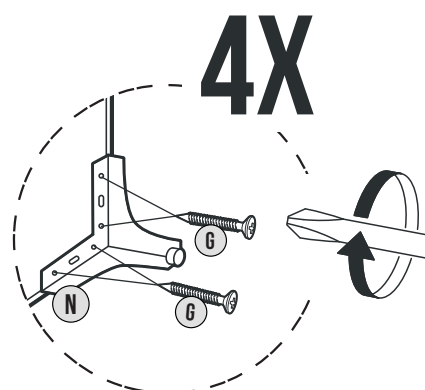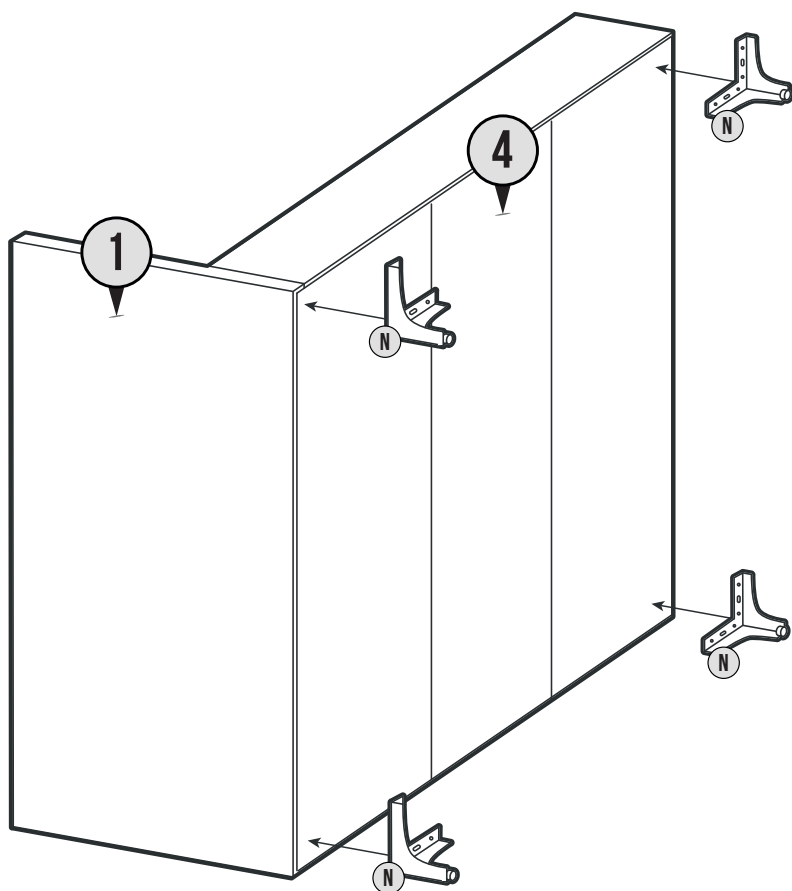


G-16_{SZT}

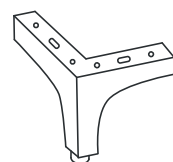

N-4_{SZT}

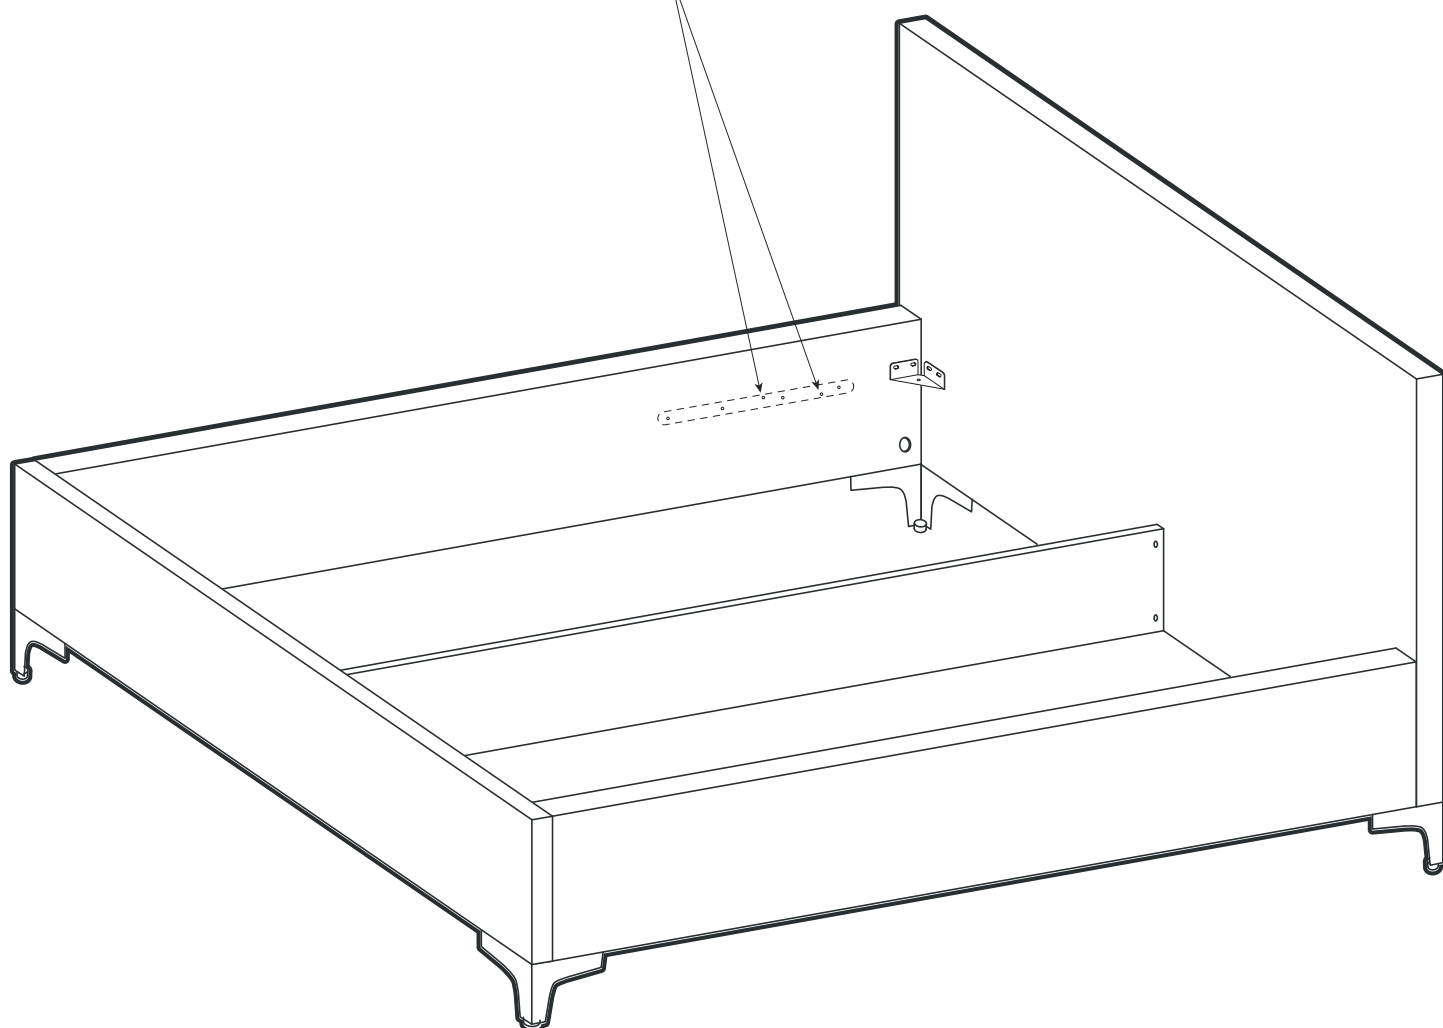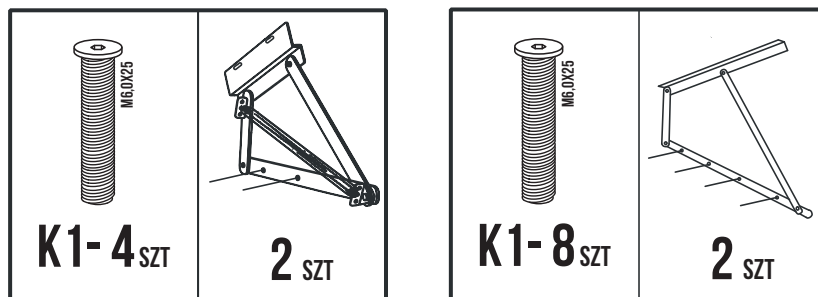

**UWAGA! DO STELAŻA DREWNIANEGO
NIE NALEŻY MONTOWAĆ NÓŻEK
DO BELKI ŚRODKOWEJ**

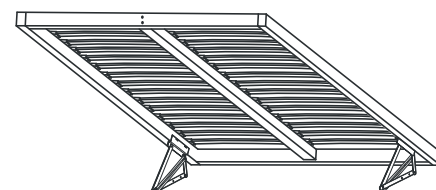

**INSTRUKCJA MONTAŻU W PACZCE
INSTRUCTION IN THE BOX**